
 
 








 


 



 

 


 

 




 






| Original | Replacement | Original | Replacement |
|--------------|---|------------|---|
| On/Off |  Power | Return |  Back |
| Audio Off |  Mute | Next |  >> |
| Slow Up |  Ch + | Prev. |  << |
| Slow Down |  Ch - | Progr. |  Sleep |
| Pause |  Pause | Top Menu |  D. Menu |
| Auto/Track |  Smart | OK Enter |  Ok |
| Stop |  Stop | Menu Right |  Right |
| Subt. |  Subt | Menu Down |  Down |
| Rep/A-B |  TV/R | Volume+ |  Vol + |
| Repeat/1/All |  Text | Volume- |  Vol - |
| Title |  List | 1 |  1 |
| Zoom |  Shift + Eject | 2 |  2 |
| DVD/TV |  AV | 3 |  3 |
| Menu |  Menu | 4 |  4 |
| Menu Up |  Up | 5 |  5 |
| Display |  Info | 6 |  6 |
| Menu Left |  Left | 7 |  7 |



| Original | Replacement | Original | Replacement |
|------------|--|----------|---|
| Rewind |  << | Digest |  +  Shift + Guide |
| 8 |  8 | | |
| Record |  Rec | | |
| Play |  Play | | |
| F.Forward |  >> | | |
| Lang |  Dual | | |
| Angle |  Format | | |
| 9 |  9 | | |
| +10 |  Guide | | |
| 0 |  0 | | |
| Open/Close |  Eject | | |
| C/CH |  Pre Ch | | |
| Play/Back |  Media | | |
| Setup |  Options | | |
| Resume |  +  Shift + Play | | |
| Np |  +  Shift + Subt | | |
| Pbc |  +  Shift + Text | | |

