






Original	Replacement	Original	Replacement
	Power		Power
	Up		Up
	Left		Left
	Right		Right
	Down		Down
	M Menu		Menu / Home
	[i] Info		Info / Angle
	OK		OK
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	P < P		Display / Media
	0		0
	Aspect		Picture / Format
	Swap		Back / Return
	P - / CH -		CH- / Page-
	P + / CH +		CH+ / Page+
	Vol -		Vol-
	Vol +		Vol+
	Mute		Mute / Dimmer
	I - II		Audio / Lang I/II
	[TV]		Smart / List
	Source		AV / Input / RDS
	Red / PIP		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Text		Text / Goto





Original	Replacement	Original	Replacement
	TIMER SLEEP Sleep / Timer		
	HOLD Stop / Hold		
	CLEAR EXIT CANCEL Exit / Cancel / Clear		
	SHIFT + GOTO TEXT Shift + Text /		
	SIZE ZOOM Zoom / Size		
	OPT-TOOLS SETUP Setup / OPT /		
	TOP MENU D.MENU D.Menu / Top		

Original	Replacement	Original	Replacement

