 



 



 

 

 







 



 



 



 



 

 

 



 



 



 



 



 



 

 

 

 

 

 

 

 

 

 

 
 

 
 

 




Original	Replacement	Original	Replacement
 Standby	 Power	 Vol+	 Vol+
 Rec PVR	 Rec / Rec Mode	 Right	 Right
 PVR List	 Smart / List	 Favourite	 Fav / Marker / PC
 Mute	 Mute / Dimmer	 CH-	 CH- / Page-
 EPG	 Guide / EPG / -/-	 Down	 Down
 Info	 Info / Angle	 Tv/Radio	 TV/Radio /
 TTX	 Text / Goto	 1	 1
 Audio	 Audio / Lang I/II	 2	 2
 DTV/VCR	 AV / Input / RDS	 3	 3
 Subtitle	 Subtitle / EQ	 Recall	 Back / Return
 Menu	 Menu / Home	 4	 4
 Up	 Up	 5	 5
 CH+	 CH+ / Page+	 6	 6
 Exit	 Exit / Cancel / Clear	 Goto	 Shift + Text /
 Left	 Left	 7	 7
 Vol-	 Vol-	 8	 8
 OK	 OK	 9	 9





Original		Replacement		Original		Replacement	
	0		0				
	<<		<< / Tune-				
	>>		>> / Tune+				
	l<<		l<< / Preset-				
	>>l		>>l / Preset+				
	Play		Play / Slow				
	Pause		Pause / Step / Freeze				
	Stop		Stop / Hold				
	Repeat		Shift + Green / APP / Repeat				
	Red		Red / Netflix / Search				
	Green		Green / APP / Repeat				
	Yellow		Yellow / YouTube / Repeat				
	Blue		Blue / Prime Video / Random				

