 

 

 

 







 



 

 

 



 

 









Original	Replacement
 Standby	 Power
 Info	 Info / Angle
 Subtitle	 Subtitle / EQ
 Mute	 Mute / Dimmer
 I<<	 I<< / Preset-
 Play	 Play / Slow
 <<	 << / Tune-
 >>I	 >>I / Preset+
 Pause	 Pause / Step / Freeze
 >>	 >> / Tune+
 Menu	 Menu / Home
 Up	 Up
 CH+	 CH+ / Page+
 Exit	 Exit / Cancel / Clear
 Vol-	 Vol-
 Left	 Left
 OK	 OK

Original	Replacement
 Right	 Right
 Vol+	 Vol+
 Record	 Rec / Rec Mode
 CH-	 CH- / Page-
 Down	 Down
 Stop	 Stop / Hold
 1	 1
 2	 2
 3	 3
 EPG	 Guide / EPG / -/-
 4	 4
 5	 5
 6	 6
 Back	 Back / Return
 7	 7
 8	 8
 9	 9





 

 

 

 



 

 







 

 



 

 



 



 

 



 







 



 



 









Original	Replacement
0	HDMI - BAT 0
Media	MEDIA DISPLAY Display / Media
USB	SHIFT + USB 8 Shift + 8
Tv/Radio	PROGRAM TV/RADIO TV/Radio /
Audio	LANG I/II AUDIO Audio / Lang I/II
TTX	GOTO TEXT Text / Goto
Timer	TIMER SLEEP Sleep / Timer
FAV	PC FAV MARKER Fav / Marker / PC
Res	LIST SMART Smart / List
Red	NETFLIX SEARCH Red / Netflix / Search
Green	APP REPEAT Green / APP / Repeat
Yellow	YouTube REPEAT A-B Yellow / YouTube / Repeat
Blue	Prime Video RANDOM Blue / Prime Video / Random

Original	Replacement





Original	Replacement	Original	Replacement
 Standby	 Power	 Right / Vol+	 Vol+
 Info	 Info / Angle	 Right / Vol+	 Right
 Subtitle	 Subtitle / EQ	 Record	 Rec / Rec Mode
 Mute	 Mute / Dimmer	 Down / CH-	 Down
 I<<	 I<< / Preset-	 Down / CH-	 CH- / Page-
 Play	 Play / Slow	 Stop	 Stop / Hold
 <<	 << / Tune-	 1	 1
 >>I	 >>I / Preset+	 2	 2
 Pause	 Pause / Step / Freeze	 3	 3
 >>	 >> / Tune+	 EPG	 Guide / EPG / -/-
 Menu	 Menu / Home	 4	 4
 Up / CH+	 CH+ / Page+	 5	 5
 Up / CH+	 Up	 6	 6
 Exit	 Exit / Cancel / Clear	 Back	 Back / Return
 Left / Vol-	 Vol-	 7	 7
 Left / Vol-	 Left	 8	 8
 OK	 OK	 9	 9





Original	Replacement	Original	Replacement
	0		0
	Media		Display / Media
	USB		Shift + 8
	TV / Radio		TV/Radio /
	Audio		Audio / Lang I/II
	TTX		Text / Goto
	Timer		Sleep / Timer
	Fav		Fav / Marker / PC
	Res.		Smart / List
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random

