


























































| Original | Replacement | Original | Replacement |
|---|---|--|---|
|  Power |  Power |  Yellow |  Yellow / YouTube / Repeat |
|  Source |  AV / Input / RDS |  Menu |  Menu / Home |
|  Picture |  Picture / Format |  0 |  0 |
|  Sound |  Sound / Title |  Exit |  Exit / Cancel / Clear |
|  Still |  Pause / Step / Freeze |  Blue |  Blue / Prime Video / Random |
|  Mute |  Mute / Dimmer |  Up |  Up |
|  1 |  1 |  Left |  Left |
|  2 |  2 |  OK |  OK |
|  3 |  3 |  Right |  Right |
|  Red |  Red / Netflix / Search |  Down |  Down |
|  4 |  4 |  CH - |  CH- / Page- |
|  5 |  5 |  CH + |  CH+ / Page+ |
|  6 |  6 |  Vol - |  Vol- |
|  Green |  Green / APP / Repeat |  Vol + |  Vol+ |
|  7 |  7 |  Guide / Size |  Guide / EPG / -/-- |
|  8 |  8 |  Index / Subtitle |  Subtitle / EQ |
|  9 |  9 |  Sleep |  Sleep / Timer |

| Original | Replacement | Original | Replacement |
|--|---|--|---|
|  Power |  DIMMER MUTE |  Yellow |  SHIFT |
|  TV |  DVD |  SAT |  AUX |
|  SLOW |  STEP - FREEZE |  HOLD |  REC MODE |
|  TUNE- |  TUNE+ |  PRESET- |  PRESET+ |
|  TITLE |  LANG VII |  EQ |  SURROUND |
|  SOUND |  AUDIO |  SUBTITLE |  PROGRAM |
|  FORMAT |  SIZE |  TIMER |  TV RADIO |
|  PICTURE |  ZOOM |  SLEEP |  RDS |
|  TOP MENU |  OPT-TOOLS |  GOTO |  AV INPUT |
|  D.MENU |  SETUP |  TEXT |  HOME |
|  MENU |  ANGLE |  INFO |  MENU |
|  OK |  OK |  OK |  OK |
|  EXIT |  CANCEL |  LIST |  RETURN |
|  VOL+ |  SMART |  MEDIA |  CH PAGE + |
|  VOL- |  DISPLAY |  TV |  CH PAGE - |
|  1 |  DVD |  CD - STB |  1 |
|  2 |  TAPE |  TUNER |  2 |
|  3 |  AUX - HDD |  USB |  3 |
|  4 |  HDMI - BAT |  PC |  4 |
|  5 |  FAV |  FAV MARKER |  5 |
|  6 |  GUIDE EPG |  NETFLIX |  6 |
| 7 | REPEAT | REPEAT A-B | 7 |
| 8 | REPEAT | RANDOM | 8 |
| 9 | REPEAT | RANDOM | 9 |



