



Original	Replacement
Power	Power
PP	Pre Ch
Mute	Mute
I - II	Dual
P<P	Back
- / - -	Gui de
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
Vol +	Vol +

Original	Replacement
Vol -	Vol -
Up	Up
Down	Down
Right	Right
Left	Left
M	Ok
PR+	Ch +
PR-	Ch -
M	Menu
Red/ Sound	Red
Green/ Pi ct ur e	Green
Yel l ow/ Feat ur e	Yel l ow
Bl ue/ I nst al l	Bl ue
TV	TV/ R
AV	AV
[≡]	Text
[≡]	Smart



