



 




Original	Replacement	Original	Replacement
Power	Power	--	Guide / EPG / -/--
Up / P+	Up	0	0
Up / P+	CH+ / Page+	P < P	Fav / Marker / PC
Menu	Menu / Home	PP	Back / Return
Left	Left	Vol+	Vol+
Right	Right	I-II	Audio / Lang I/II
Down / P-	Down	Mute	Mute / Dimmer
Down / P-	CH- / Page-	Vol-	Vol-
1	1	Info	Info / Angle
2	2	Red	Red / Netflix / Search
3	3	Green	Green / APP / Repeat
4	4	Yellow	Yellow / YouTube / Repeat
5	5	Blue	Blue / Prime Video / Random
6	6	[TV]	Shift + 1
7	7	[TV]	TV/Radio /
8	8	[AV]	AV / Input / RDS
9	9	[≡]	Text / Goto







 













 

 

 

 

 





 





 

 

















 











Original	Replacement	Original	Replacement
	[≡☉] EQ Subtitle / EQ		
	[/≡] FORMAT Picture / Format		
	[≡X] CLEAR EXIT Exit / Cancel / Clear		
	[≡⇕] SIZE ZOOM Zoom / Size		
	[≡?] MEDIA DISPLAY Display / Media		
	[≡i] LIST SMART Smart / List		







































Original	Replacement	Original	Replacement
 Power	 Power	 9	 9
 Up / P+	 Up	 +10	 Guide / EPG / -/-
 Up / P+	 CH+ / Page+	 0	 0
 Menu	 Menu / Home	 Repeat	 Green / APP / Repeat
 Left	 Left	 Search	 Red / Netflix / Search
 Select	 OK	 A to B	 Yellow / YouTube / Repeat
 Right	 Right	 Display	 Display / Media
 Down / P-	 CH- / Page-	 Audio	 Audio / Lang I/II
 Down / P-	 Down	 Subtitle	 Subtitle / EQ
 1	 1	 Zoom	 Zoom / Size
 2	 2	 Prog	 TV/Radio /
 3	 3	 C	 Blue / Prime Video / Random
 4	 4	 Angle	 Info / Angle
 5	 5	 Return	 Back / Return
 6	 6	 Time	 Sleep / Timer
 7	 7	 <<	 << / Tune-
 8	 8	 >>	 >> / Tune+





Original	Replacement	Original	Replacement
On/Off	 Power		
Mute	 Mute / Dimmer		
Txt Stop	 Stop / Hold		
Tone+	 >> / Tune+		
Lang	 Sound / Title		
Menu audio	 Audio / Lang I/II		
Subt.List	 Subtitle / EQ		
Txt Expand	 Zoom / Size		
Sleep Timer	 Sleep / Timer		
Return TV	 TV/Radio /		
Menu video	 D.Menu / Top		
Text	 Text / Goto		
Menu	 Menu / Home		
Menu Up	 Up		
Info	 Info / Angle		
Menu Left	 Left		
OK Enter	 OK		

Original	Replacement	Original	Replacement
Menu Right	 Right		
Menu Down	 Down		
Back	 Back / Return		
Volume+	 Vol+		
Chan.Up	 CH+ / Page+		
Volume-	 Vol-		
Display	 Display / Media		
Chan.Down	 CH- / Page-		
1	 1		
2	 2		
3	 3		
4	 4		
5	 5		
6	 6		
7	 7		
8	 8		
9	 9		



