 
 





 



 
 
 

 

 

 




 
 




Original	Replacement	Original	Replacement
 Power	 Power	 4	 4
 Source	 AV	 5	 5
 Rec	 Rec	 6	 6
 Play	 Play	 7	 7
 Pause	 Pause	 8	 8
 Stop	 Stop	 9	 9
 Lang	 Dual	 0	 0
 <<	 <<	 Tv	 TV/R
 >>	 >>	 Back	 Shift + Back
 Text	 Text	 Up	 Up
 Red	 Red	 Down	 Down
 Green	 Green	 Right	 Right
 Yellow	 Yellow	 Left	 Left
 Blue	 Blue	 OK	 Ok
 1	 1	 Menu	 Menu
 2	 2	 Exit	 Exit
 3	 3	 BACK	 Back





Original		Replacement		Original	Replacement
	Q.Menu		D. Menu		
	O		Options		
	Music/Photo		Eject		
	*/o		Subt		
	*/Search		Sleep		
	Tv List		List		
	i		Info		
	[≡]		Guide		
	Size		Format		
	Vol+		Vol +		
	Vol-		Vol -		
	PR+		Ch +		
	PR-		Ch -		
	Mute		Mute		

