



 

 

 

 



 

 

 

 











 







































Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	DTV / ATV		D.Menu / Top
	0		0
	Recall		Back / Return
	P.Mode		Picture / Format
	S.Mode		Sound / Title
	Sleep		Sleep / Timer
	Vol +		Vol+
	MTS		Audio / Lang I/II
	CH +		CH+ / Page+
	Vol -		Vol-
	REC List		Smart / List
	CH -		CH- / Page-
	FAV List		Fav / Marker / PC
	REC		Rec / Rec Mode
	Freeze		Pause / Step / Freeze
	Menu		Menu / Home
	Up		Up
	Source		AV / Input / RDS
	Left		Left
	Enter		OK
	Right		Right
	Exit		Exit / Cancel / Clear
	Down		Down





Original	Replacement
DISPLAY	Display / Media
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
GUIDE	<< / Tune-
GUIDE	Guide / EPG / -/--
TIMESHIFT	Play / Slow
ASPECT	>> / Tune+
CANCEL	I<< / Preset-
SUB.PG	>>I / Preset+
INDEX	Info / Angle
INDEX	Stop / Hold
TV/RADIO	TV/Radio /
SUBTITLE	Subtitle / EQ
REVEAL	Setup / OPT /
SIZE	Zoom / Size

Original	Replacement
HOLD	Shift + Stop /
TEXT	Text / Goto

