



| Original   | Replacement   |
|--|---|
|  Mute   |  Mute / Dimmer       |
|  Power  |  Power               |
|  PP     |  Back / Return       |
|  I / II |  Audio / Lang I/II   |
|  1      |  1                   |
|  2      |  2                   |
|  3      |  3                   |
|  4      |  4                   |
|  5      |  5                   |
|  6      |  6                   |
|  7     |  7                  |
|  8    |  8                 |
|  9    |  9                 |
|  0    |  0                 |
|  --   |  Fav / Marker / PC |
|  P<P  |  Display / Media   |
|  Menu |  Menu / Home       |

| Original   | Replacement   |
|--|---|
|  Info               |  Info / Angle                  |
|  Left               |  Left                          |
|  P +                |  Shift + CH+ /                 |
|  P +                |  CH+ / Page+                   |
|  Right              |  Right                         |
|  P -                |  Shift + CH- /                 |
|  P -                |  CH- / Page-                   |
|  Vol -              |  Vol-                          |
|  Vol +              |  Vol+                          |
|  Red / Sound        |  Red / Netflix / Search        |
|  Green / Picture   |  Green / APP / Repeat         |
|  Yellow / Feature |  Yellow / YouTube / Repeat   |
|  Blue / Install   |  Blue / Prime Video / Random |
|  TV               |  TV/Radio /                  |
|  AV               |  AV / Input / RDS            |
|  Text             |  Text / Goto                 |
|  Mix              |  Shift + Goto Text / Goto    |



