







 
 


 



 
 



 



 










 







 




Original	Replacement
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Recall	 Pre Ch
 Display	 Info
 P.Mode	 Format
 Text	 Text
 Red / PIP	 Red
 Green / Sub Ch	 Green

Original	Replacement
 Yellow / Swap	 Yellow
 Blue / Main Ch	 Blue
 Up	 Up
 CH+	 Ch +
 Down	 Down
 CH-	 Ch -
 Right	 Right
 Vol+	 Vol +
 Left	 Left
 Vol-	 Vol -
 Menu	 Menu
 Menu	 Ok
 S.Mode	 Shift + Dual
 Mute	 Mute
 Zoom / Sub	 3D
 Still	 Back
 O)▼/Audio / Reveal	 Dual





	Original		Replacement	
	Video / Index		AV	
	S-Video / Hold		TV/R	
	PC / Size		Options	
	YPbPr / Cancel		Exit	
	DM / Mix		Subt	
	Time	+	Shift + AV	

	Original		Replacement	

