




Original	Replacement
 Power	 Power
 TV / Video	 AV / Input / RDS
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 Guide / EPG / -/--
 Quick	 Back / Return
 Mute	 Mute / Dimmer
 Sleep	 Sleep / Timer
 Skip	 Exit / Cancel / Clear

Original	Replacement
 Display	 Display / Media
 Up / Prog+	 Up
 Up / Prog+	 CH+ / Page+
 Left / Vol-	 Left
 Left / Vol-	 Vol-
 Menu	 Menu / Home
 Menu	 OK
 Right / Vol+	 Right
 Right / Vol+	 Vol+
 Down / Prog-	 Down
 Down / Prog-	 CH- / Page-
 C-Temp	 Info / Angle
 P-STD	 Picture / Format
 Auto Search	 Red / Netflix / Search
 Wide	 Zoom / Size
 OSD Position	 Green / APP / Repeat
 OSD Language	 Yellow / YouTube / Repeat





	Original	Replacement	Original	Replacement
	S-STD	 Sound / Title		
	M/S	 Audio / Lang I/II		
	EQ	 Subtitle / EQ		
	Surround	 Eject / Surround		

