



















 




 




Original	Replacement
 MUTE	 Mute / Dimmer
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 --	 Guide / EPG / --
 0	 0
 PIP	 Zoom / Size
 Menu	 Menu / Home
 TV/AV	 AV / Input / RDS
 Left	 Left

Original	Replacement
 Vol-	 Vol-
 Up	 Up
 P+	 CH+ / Page+
 Vol+	 Vol+
 Right	 Right
 P-	 CH- / Page-
 Down	 Down
 Call	 Fav / Marker / PC
 Time	 Sleep / Timer
 Fresh	 Subtitle / EQ
 View	 Smart / List
 Mode	 Picture / Format
 Back	 Back / Return

