 









 



























 






 
 
 













 







 





Original	Replacement	Original	Replacement
	Power		Power
	Sleep		Sleep / Timer
	Input		AV / Input / RDS
	1		1
	2		2
	3		3
	Mode		D.Menu / Top
	4		4
	5		5
	6		6
	Audio Mode		Audio / Lang I/II
	7		7
	8		8
	9		9
	Sound Select		Sound / Title
	0		0
	Screen Mode		Smart / List
	Menu		Menu / Home
	Up		Up
	Guide		Guide / EPG / ---
	Left		Left
	OK		OK
	Right		Right
	Back		Back / Return
	Down		Down
	i		Info / Angle
	Vol +		Vol+
	Mute		Mute / Dimmer
	P +		CH+ / Page+
	Vol -		Vol-
	P -		CH- / Page-
	TV / Radio		TV/Radio /
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat





Original	Replacement	Original	Replacement
 Yellow	 Yellow / YouTube / Repeat		
 Blue	 Blue / Prime Video / Random		
 Color System	 Picture / Format		
 Reveal	 Shift + Back / Return		
 Expand	 Display / Media		
 Sub Code	 Shift + Setup / OPT / Tools		
 [≡]	 Text / Goto		
 [...]	 Setup / OPT /		
 [≡i]	 Shift + Info / Angle		
 [≡□]	 Stop / Hold		

Original	Replacement

