






























Original	Replacement	Original	Replacement
Audio	 Audio / Lang I/II	PRG	 TV/Radio /
AFFICHE	 Power	CLR - EFF	 Exit / Cancel / Clear
Open / Close - OUVRE-FERME	 Eject / Surround	Up	 Up
Angle	 Info / Angle	Left	 Left
1	 1	OK	 OK
Subtitle - SOUS TITRE	 Subtitle / EQ	Title - TITRE	 Sound / Title
Search -	 Red / Netflix / Search	Right	 Right
2	 2	Down	 Down
3	 3	Vol+	 Vol+
4	 4	MODE	 Smart / List
5	 5	Vol-	 Vol-
6	 6	ZOOM	 Zoom / Size
7	 7	A-B	 Yellow / YouTube / Repeat
8	 8	STOP	 Stop / Hold
9	 9	MARK -	 Fav / Marker / PC
0	 0	Return -	 Back / Return
Menu	 Menu / Home	Setup - REGL	 Setup / OPT /



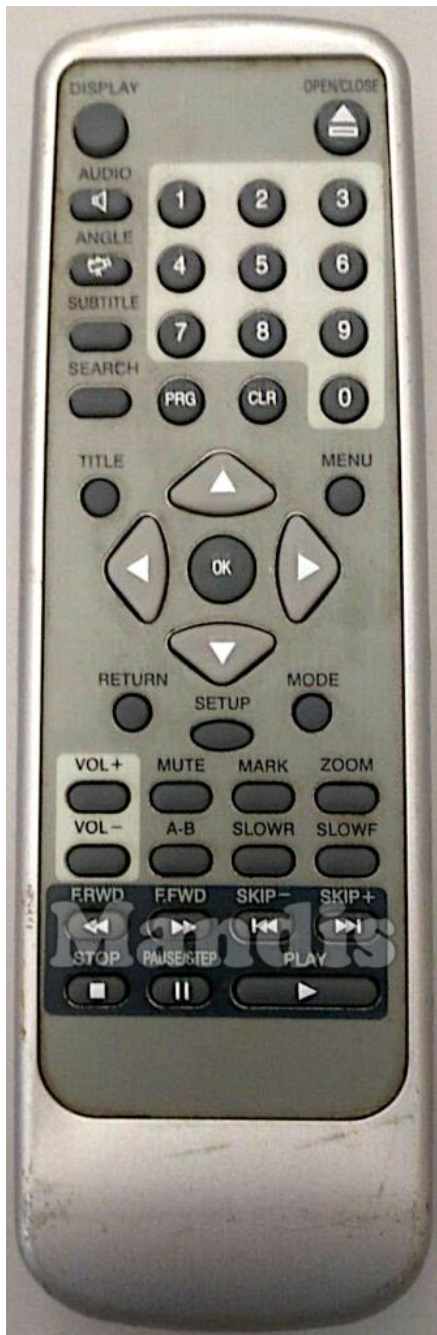

Original	Replacement	
F.Rwd - AR.RAPID	 << / Tune-	
F.Fwd - AV.RAPID	 >> / Tune+	
Mute -	 Mute / Dimmer	
Slow R -	 CH- / Page-	
Slow F -	 CH+ / Page+	
Skip+ / SAUT+	 >>I / Preset+	
Skip- / SAUT-	 I<< / Preset-	
PAUSE/IMAGE	 Pause / Step / Freeze	
Play - LECTURE	 Play / Slow	

Original	Replacement	

