








 











 




 
















 








 

 


Original	Replacement
	 Mute / Dimmer
	 Power
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 Guide / EPG / -/-
	 Info / Angle
	 0
	 Smart / List
	 CH+ / Page+
	 Up

Original	Replacement
	 Left
	 Vol-
	 OK
	 Vol+
	 Right
	 Down
	 CH- / Page-
	 Exit / Cancel / Clear
	 Menu / Home
	 Rec / Rec Mode
	 Back / Return
	 Red / Netflix / Search
	 << / Tune-
	 Play / Slow
	 Green / APP / Repeat
	 >> / Tune+
	 Blue / Prime Video / Random





Original	Replacement	Original	Replacement
 Blue / >> / Text	 Text / Goto		
 Radio	 +  Shift + 6		
 Radio	 +  Shift + TV/Radio / Program		
 Yellow / Pause	 Pause / Step / Freeze		
 Yellow / Pause	 Yellow / YouTube / Repeat		
 Stop	 Stop / Hold		
 TV	 +  Shift + 1		
 TV	 TV/Radio /		
 F1	 Sound / Title		
 F2	 Audio / Lang I/II		

Original	Replacement	Original	Replacement

