























 


 
 

 

 






 
 
 
 

 








	Original	Replacement		Original	Replacement
	Standby		Power		Info
	DTV/VCR		Smart		Menu
	Mute		Mute		EPG
	1		1		Exit
	2		2		Ch +
	3		3		Ch -
	4		4		Up
	5		5		Down
	6		6		Right
	7		7		Left
	8		8		Ok
	9		9		Vol +
	0		0		Vol -
	Audio		Dual		Text
	FAV		Pre Ch		Red
	Recall		Back		Green
	Subtitle		Subt		Yellow





	Original	Replacement	Original	Replacement
	Blue			
	Rec List			
	Tv/Radio			
	Stop			
	Play			
	Pause			
	<<			
	>>			
	Record			

