




 















 

 

 
















Original	Replacement
 Power	 Power
 Open/Close	 Eject
 Tv/DVD	 TV/R
 *1	 Shift + 1
 AV/INPUT	 AV
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 I.Skip	 Guide
 << Scan	 <<

Original	Replacement
 Scan >>	 >>
 I<< Skip	 I<<
 Skip >>I	 >>I
 Pause/Step	 Pause
 Play	 Play
 Stop	 Stop
 Home	 Smart
 Menu/List	 Menu
 Display	 Info
 Return	 Back
 Up/PRCH+	 Up
 Down/PR/CH-	 Down
 Right	 Right
 Left	 Left
 Enter	 Ok
 Audio	 Dual
 Subtitle	 Subt





Original	Replacement
 Zoom	 Shift + Eject
 CHP.ADD	 Red
 Rec	 Rec
 Rec Mode	 Shift + Rec
 Title	 Options
 Thumbnail	 Text
 Play Mode	 Shift + Play
 Marker	 Format
 Search	 Shift + TV/R
 Clear	 Exit
 *2	 Shift + 2
 *3	 Shift + 3
 Power Tv	 Shift + Power
 AV/Input Tv	 Shift + AV
 PR/CH+ Tv	 Ch +
 PR/CH- Tv	 Ch -
 Vol+ Tv	 Vol +

Original	Replacement
 Vol- Tv	 Vol -
 Mute Tv	 Mute

