

 

 















 



 



 







 


 
 











 











 







| Original | Replacement | Original | Replacement |
|---|---|---|---|
|  Power |  Power |  0 |  0 |
|  i |  Info / Angle |  Mute |  Mute / Dimmer |
|  Analog Menu |  Menu / Home |  Exit |  Exit / Cancel / Clear |
|  Digital Menu |  D.Menu / Top |  Vol+ |  Vol+ |
|  1 |  1 |  Up |  Up |
|  2 |  2 |  P+ |  CH+ / Page+ |
|  3 |  3 |  Left |  Left |
|  Input Select |  AV / Input / RDS |  Enter/CH List |  OK |
|  4 |  4 |  Enter/CH List |  Smart / List |
|  5 |  5 |  Right |  Right |
|  6 |  6 |  Vol- |  Vol- |
|  TV/DVB-T |  Display / Media |  Down |  Down |
|  7 |  7 |  P- |  CH- / Page- |
|  8 |  8 |  TV/Radio |  TV/Radio / |
|  9 |  9 |  [≡] |  Text / Goto |
|  Guide (EPG) |  Guide / EPG / -/- |  [≡o] [=o]/P↔P |  Back / Return |
|  Timer |  Sleep / Timer |  Picture Size |  Picture / Format |



