



Original	Replacement	Original	Replacement
Power	Power	--	Guide / EPG / -/--
Up / P+	Up	0	0
Up / P+	CH+ / Page+	P < P	Fav / Marker / PC
Menu	Menu / Home	PP	Back / Return
Left	Left	Vol+	Vol+
Right	Right	I-II	Audio / Lang I/II
Down / P-	Down	Mute	Mute / Dimmer
Down / P-	CH- / Page-	Vol-	Vol-
1	1	Info	Info / Angle
2	2	Red	Red / Netflix / Search
3	3	Green	Green / APP / Repeat
4	4	Yellow	Yellow / YouTube / Repeat
5	5	Blue	Blue / Prime Video / Random
6	6	[TV]	Shift + 1
7	7	[TV]	TV/Radio /
8	8	[AV]	AV / Input / RDS
9	9	[ ≡ ]	Text / Goto





Original	Replacement	Original	Replacement
	[≡☉] EQ Subtitle / EQ		
	[ /≡] FORMAT Picture / Format		
	[≡X] CLEAR EXIT Exit / Cancel / Clear		
	[≡⇕] SIZE ZOOM Zoom / Size		
	[≡?] MEDIA DISPLAY Display / Media		
	[≡i] LIST SMART Smart / List		



 
 









 


 


 





Original	Replacement	Original	Replacement
	Power		Power
	Up / P+		Up
	Up / P+		CH+ / Page+
	Menu		Menu / Home
	Left		Left
	Select		OK
	Right		Right
	Down / P-		CH- / Page-
	Down / P-		Down
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	+10		Guide / EPG / -/-
	0		0
	Repeat		Green / APP / Repeat
	Search		Red / Netflix / Search
	A→B		Yellow / YouTube / Repeat
	Display		Display / Media
	Audio		Audio / Lang I/II
	Subtitle		Subtitle / EQ
	Zoom		Zoom / Size
	Prog		TV/Radio /
	C		Blue / Prime Video / Random
	Angle		Info / Angle
	Return		Back / Return
	Time		Sleep / Timer
	<<		<< / Tune-
	>>		>> / Tune+







































	Original	Replacement	Original	Replacement
		 I<< / Preset-		
		 >>I / Preset+		
		 Play / Slow		
		 Pause / Step / Freeze		
		 Stop / Hold		
		 Sound / Title		
		 Eject / Surround		







 





Original	Replacement	Original	Replacement
On/Off	 Power	Menu Right	 Right
Mute	 Mute / Dimmer	Menu Down	 Down
Txt Stop	 Stop / Hold	Back	 Back / Return
Tone+	 >> / Tune+	Volume+	 Vol+
Lang	 Sound / Title	Chan.Up	 CH+ / Page+
Menu audio	 Audio / Lang I/II	Volume-	 Vol-
Subt.List	 Subtitle / EQ	Display	 Display / Media
Txt Expand	 Zoom / Size	Chan.Down	 CH- / Page-
Sleep Timer	 Sleep / Timer	1	 1
Return TV	 TV/Radio /	2	 2
Menu video	 D.Menu / Top	3	 3
Text	 Text / Goto	4	 4
Menu	 Menu / Home	5	 5
Menu Up	 Up	6	 6
Info	 Info / Angle	7	 7
Menu Left	 Left	8	 8
OK Enter	 OK	9	 9





Original	Replacement	Original	Replacement
Guide -/-- 1.	 Guide / EPG / -/--		
0/10	 0		
2.Fav P/C 2.	 Fav / Marker / PC		
Red	 Red / Netflix / Search		
Green	 Green / APP / Repeat		
Yellow	 Yellow / YouTube / Repeat		
Blue	 Blue / Prime Video / Random		
Lang	 Shift + Audio / Lang I/II		

Original	Replacement

