


 


 
 

 
 

 

 


 

 



 
 

 
 

 






 

 


 









 

 
 



 













Original	Replacement
 Power	 Power
 Open / Close	 Eject
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 Shift + Guide
 Recall	 Back
 Red	 Red
 Green	 Green
 Yellow	 Yellow

Original	Replacement
 Blue	 Blue
 P.Mode	 Shift + Format
 S.Mode	 Shift + Dual
 Mute	 Mute
 TXT	 Text
 Aspect	 Format
 Nicam	 Shift + 3D
 Display	 Info
 Sleep	 Sleep
 Up / PR +	 Up
 Up / PR +	 Ch +
 Down / PR -	 Down
 Down / PR -	 Ch -
 Right / Vol +	 Right
 Right / Vol +	 Vol +
 Left / Vol -	 Left
 Left / Vol -	 Vol -





Original	Replacement
 Enter	 Ok
 Function	 AV
 Menu	 Menu
 Stop / Hold	 Stop
 Play/Pause / Mix	 Play
 Play/Pause / Mix	 Pause
 DVD Menu / DTV/Radio	 TV/R
 DVD Menu / DTV/Radio	 D. Menu
 Subpage	 Shift + Subt
 Media / Reveal	 Media
 Angle / Index	 3D
 Goto / Size	 Smart
 Repeat / EPG	 Guide
 Up / I<< / List	 Shift + Up
 A-B / FAV	 Pre Ch
 Up / I<< / List	 List
 Up / I<< / List	 I<<

Original	Replacement
 Down / >>I	 Shift + Down
 Down / >>I	 >>I
 Right / >> / Page Up	 Shift + Right
 Left / << / Page Down	 Shift + Left
 Left / << / Page Down	 <<
 Right / >> / Page Up	 >>
 Setup	 Options
 Language	 Dual
 Title	 Shift + Info
 Zoom / Still	 Shift + Eject
 Subtitle	 Subt
 Setup	 Shift + Ok

