



 







































 



























Original		Replacement		Original		Replacement	
	Power		Power		V -		Vol-
	Mute		Mute / Dimmer		Home		Shift + Menu /
	1		1		CH -		CH- / Page-
	2		2		Menu		Menu / Home
	3		3		Up		Up
	4		4		Source		AV / Input / RDS
	5		5		Left		Left
	6		6		Enter		OK
	7		7		Right		Right
	8		8		Exit		Exit / Cancel / Clear
	9		9		Down		Down
	List		Smart / List		Display		Display / Media
	0		0		P.Mode		Picture / Format
	Recall		Back / Return		S.Mode		Sound / Title
	V +		Vol+		Sleep		Sleep / Timer
	Aspect		Shift + Picture / Format		MTS		Shift + Smart / List
	CH +		CH+ / Page+		Rec		Rec / Rec Mode





Original		Replacement		Original		Replacement	
	Guide		Guide / EPG / -/--		CAP		Shift + Display / Media
	Red		Red / Netflix / Search		Subtitle		Subtitle / EQ
	Green		Green / APP / Repeat		TV / Radio		TV/Radio /
	Yellow		Yellow / YouTube / Repeat		FAV		Fav / Marker / PC
	Blue		Blue / Prime Video / Random		Size / Mouse		Zoom / Size
	<< / Index		<< / Tune-		Hold / Refresh		Stop / Hold
	<< / Index		Shift + << /				
	Play/Pause /		Shift + Play /				
	Play/Pause /		Pause / Step / Freeze				
	Play/Pause /		Play / Slow				
	>> / TTX		>> / Tune+				
	>> / TTX		Shift + >> /				
	I<< / Sub.Pg		Shift + I<< / Preset-				
	I<< / Sub.Pg		I<< / Preset-				
	>>I / Reveal		>>I / Preset+				
	Stop / Mix		Shift + Rec / Rec Mode				
	Stop / Mix		Shift + Stop /				

Hold

