


 






Original	Replacement
 Power On	 Power
 Power Off	 Shift + Power
 Mute	 Mute / Dimmer
 DVD	 Shift + 2
 CD	 Shift + 3
 Tape	 Shift + 5
 Vid 1 / VCR	 Shift + 1
 Vid 2 / CBL/Sat	 Shift + 4
 Vid 3 / TV	 Shift + 7
 DIM	 Shift + Mute / Dimmer
 AM/FM	 TV/Radio /
 6 CH	 Shift + 6
 PR + / Sleep	 CH+ / Page+
 TEST	 Text / Goto
 Vol +	 Vol+
 PR - / Surr.	 CH- / Page-
 Vol -	 Vol-

Original	Replacement
 CH / [=?]	 Smart / List
 Up	 Up
 Spkr. / Menu	 Menu / Home
 Left	 Left
 Set	 Setup / OPT /
 Right	 Right
 Digital / [=X]	 D.Menu / Top
 Down	 Down
 Delay / Prev. CH	 Back / Return
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8





Original	Replacement
 Tun-M	 +  Shift + TV/Radio / Program
 9	 9
 0	 0
 Mem	 Display / Media
 Tuning +	 Red / Netflix / Search
 Tuning +	 +  Shift + CH+ /
 Green / Direct	 Green / APP / Repeat
 Yellow / Clear	 Yellow / YouTube / Repeat
 Yellow / Clear	 +  Shift + Yellow / YouTube /
 Blue / Preset +	 Blue / Prime Video / Random
 Preset +	 >>I / Preset+
 Tuning -	 +  Shift + CH- /
 Tone	 Sound / Title
 RDS	 AV / Input / RDS
 Preset -	 I<< / Preset-
 Dolby Sur	 +  Shift + Audio / Lang I/II
 DTS Sur	 +  Shift + D.Menu / Top Menu

Original	Replacement
 DTS Neo 6	 +  Shift + 9
 Night	 Sleep / Timer
 Logic 7	 Picture / Format
 Stereo	 Audio / Lang I/II
 Skip DWN	 +  Shift + Down
 Skip UP	 +  Shift + Up
 <<	 << / Tune-
 Play / Play	 Play / Slow
 >>	 >> / Tune+
 Rec	 Rec / Rec Mode
 Stop	 Stop / Hold
 Pause	 Pause / Step / Freeze

