



 






| Original   | Replacement  |
|--|--|
|  Power On       |  Power              |
|  Mute           |  Mute / Dimmer      |
|  Play / Play    |  Play / Slow        |
|  Stop           |  Stop / Hold        |
|  Rec            |  Rec / Rec Mode     |
|  <<             |  << / Tune-         |
|  >>             |  >> / Tune+         |
|  Preset -       |  I<< / Preset-      |
|  Preset +       |  >>I / Preset+      |
|  SPKR / Menu    |  Sound / Title      |
|  Stereo        |  Audio / Lang I/II |
|  Sleep / CH + |  Zoom / Size      |
|  Sleep / CH + |  Sleep / Timer    |
|  VID 2 / TV   |  TV/Radio /       |
|  Direct       |  D.Menu / Top     |
|  Set          |  Setup / OPT /    |
|  Test         |  Text / Goto      |

| Original   | Replacement   |
|--|---|
|  AVR              |  AV / Input / RDS      |
|  Up               |  Up                    |
|  Left             |  Left                  |
|  MEM              |  OK                    |
|  Right            |  Right                 |
|  Clear            |  Exit / Cancel / Clear |
|  Down             |  Down                  |
|  Delay / Prev. CH |  Back / Return         |
|  Vol +            |  Vol+                  |
|  Tuning +         |  CH+ / Page+           |
|  Vol -           |  Vol-                 |
|  Tuning -       |  CH- / Page-         |
|  1              |  1                   |
|  2              |  2                   |
|  3              |  3                   |
|  4              |  4                   |
|  5              |  5                   |





| Original   | Replacement   |
|--|---|
|  6                |  6                               |
|  7                |  7                               |
|  8                |  8                               |
|  9                |  9                               |
|  CH / Guide       |  Guide / EPG / -/--              |
|  0                |  0                               |
|  Power Off        |  Shift + Power                   |
|  DIM              |  Shift + Mute / Dimmer           |
|  Tun-M            |  Shift + << /                    |
|  Dolby           |  Shift + Audio / Lang I/II      |
|  Night          |  Shift + Sleep / Timer         |
|  AM/FM          |  Shift + TV/Radio / Program    |
|  Digital / Exit |  Shift + Exit / Cancel / Clear |
|  SURR. / CH -   |  Shift + CH- /                 |
|  VID 1 / VCR    |  Shift + 1                     |
|  DVD            |  Shift + 2                     |
|  CD             |  Shift + 3                     |

| Original  | Replacement   |
|---|---|
|  VID 3 / CBL/SAT |  Shift + 4 |
|  Tape            |  Shift + 5 |
|  6 CH.           |  Shift + 6 |
|  Logic 7         |  Shift + 7 |
|  DTS SURR        |  Shift + 8 |
|  DTS NEO:6       |  Shift + 9 |

