



Original	Replacement	Original	Replacement
	On		Power
	Off		Shift + Power
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Test		Smart
	Night		Exit
	[≡]		Text
	Sleep		Sleep
	Surr.		Dual
	SPKR/Menu		Menu
	Delay/Normal		Info
	CH./[≡?]		TV/R
	Digital/[≡X]		Media
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Tun-M/[≡+]		Shift + Guide
	Mem/[≡◇]		Pre Ch
	Tuning ▲		Ch +
	Tuning ▼		Ch -
	Direct/Green		Green
	Clear/Yellow		Yellow





Original	Replacement
 Preset ▲	 Shift + Ch +
 Preset ▼	 Shift + Ch -
 OSD	 Back
 RDS/D.Skip	 Options
 Set	 Ok
 Red	 Red
 Blue	 Blue
 DVD	 Shift + 2
 AVR	 Shift + 1
 CD	 Shift + 3
 Tape	 Shift + 4
 VID1/VCR	 Shift + 5
 VID2/TV	 Shift + 6
 VID3/CBL/SAT	 Shift + 7
 VID4	 Shift + 8
 AM/FM	 Shift + 9
 6 CH.	 Guide

Original	Replacement
 > DVD	 Play
 << DVD	 <<
 >> DVD	 >>
 Stop DVD	 Stop
 Pause DVD	 Pause
 I<</Skip Down	 I<<
 Skip Up/>>I	 >>I





Original		Replacement		Original		Replacement	
	Power On		Power		3		3
	Power Off		Shift + Power		4		4
	Night		Exit		5		5
	[≡]		Text		6		6
	Vol+		Vol +		7		7
	Vol-		Vol -		8		8
	SPKR/Menu		Menu		9		9
	CH./[≡?]		TV/R		0		0
	Digital/[≡X]		Media		Tun-M/[≡+]		Guide
	Delay/Normal		Info		Mem/[≡◇]		Pre Ch
	Up		Up		Direct		Smart
	Down		Down		Clear		Shift + Exit
	Right		Right		Preset ▲		Ch +
	Left		Left		Preset ▼		Ch -
	Set		Ok		RDS/D.Skip		Options
	1		1		>>		>>
	2		2		<<		<<

 









 

 
 



 


 



 
 

 

 



 

 
 




 







 




 

 
 





 








Original		Replacement		Original		Replacement	
	Play		Play				
	Stop		Stop				
	Pause		Pause				
	>>		>>				
	<<		<<				





Original		Replacement		Original		Replacement	
	Power On		Power		Preset ▲/Blue		Ch +
	Power Off		Shift + Power		RDS/D.Skip		Options
	SPKR/Menu		Menu		>>		>>
	Delay/Normal		Info		<<		<<
	1		1		Play		Play
	2		2		Stop		Stop
	3		3		Pause		Pause
	4		4		>>		>>
	5		5		<<		<<
	6		6		Power (On /Off)		Media
	7		7		PR+ VCR		Shift + Ch +
	8		8		PR- VCR		Ch -
	9		9		Vol+ VCR		Vol +
	0		0		Vol- VCR		Vol -
	Tun-M/[≡+]		Guide		Input VCR		AV
	Mem/[≡◆]		Pre Ch		1 VCR		Shift + 1
	Direct		Smart		2 VCR		Shift + 2





Original	Replacement
3 VCR	+ Shift + 3
4 VCR	+ Shift + 4
5 VCR	+ Shift + 5
6 VCR	+ Shift + 6
7 VCR	+ Shift + 7
8 VCR	+ Shift + 8
9 VCR	+ Shift + 9
0 VCR	+ Shift + 0
Clear VCR	Exit
Play VCR	Red
Stop VCR	Green
Rec VCR	Rec
>> VCR	Blue
<< VCR	Yellow

Original	Replacement





Original	Replacement	Original	Replacement
	PLAY MODE Play		
	>>		
	<<		
	Stop		
	REC MODE Rec		

