
















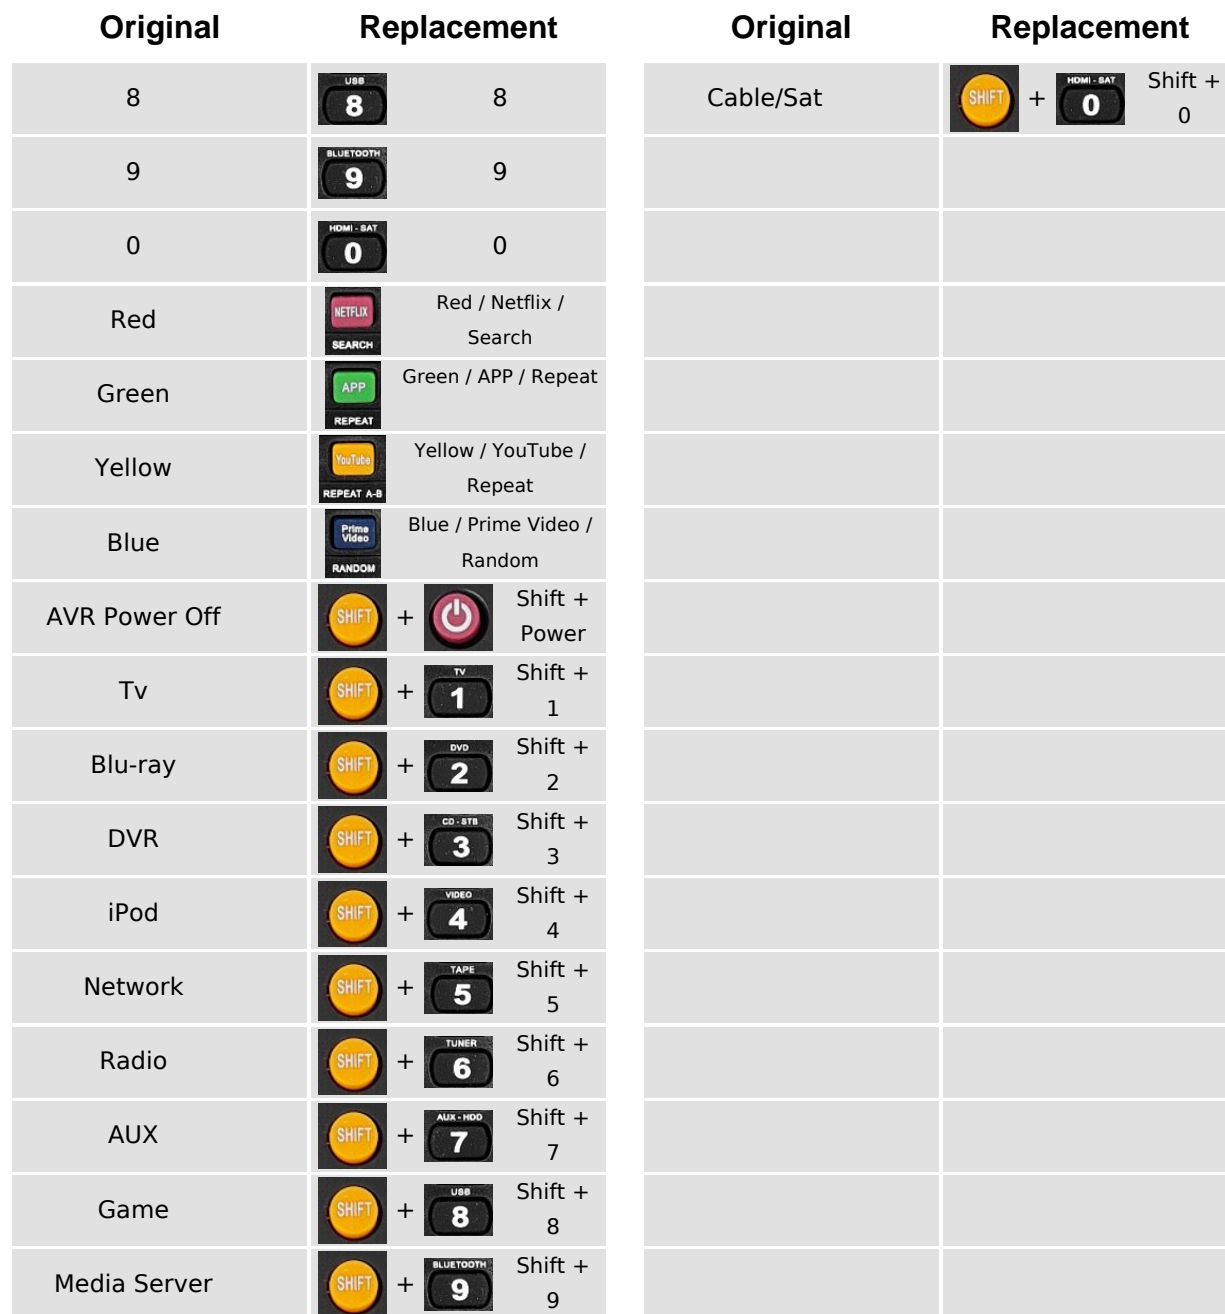 


 


Original	Replacement
AVR Power On	 Power
Mute	 Mute / Dimmer
Play	 Play / Slow
Pause	 Pause / Step / Freeze
Stop	 Stop / Hold
<<	 << / Tune-
>>	 >> / Tune+
I<<	 I<< / Preset-
>>I	 >>I / Preset+
Audio Effects	 Audio / Lang I/II
Surround Modes	 Eject / Surround
Video Modes	 Picture / Format
Sleep	 Sleep / Timer
Menu	 Menu / Home
Up	 Up
Info	 Info / Angle
Left	 Left

Original	Replacement
OK	 OK
Right	 Right
Back/Exit	 Exit / Cancel / Clear
Down	 Down
Last	 Back / Return
Vol+	 Vol+
AVR	 Smart / List
CH/Page Up	 CH+ / Page+
Vol-	 Vol-
CH/Page Down	 CH- / Page-
1	 1
2	 2
3	 3
4	 4
5	 5
6	 6
7	 7





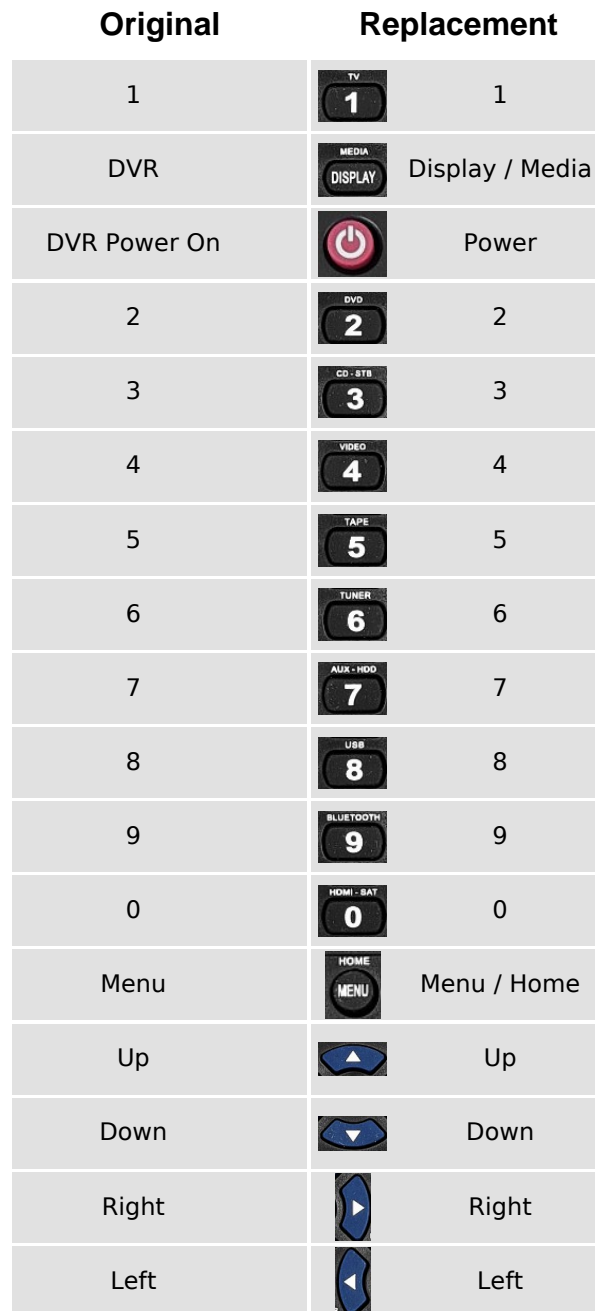











































Original	Replacement
Bluray Power	 Power
Mute	 Mute / Dimmer
Play	 Play / Slow
Pause	 Pause / Step / Freeze
Stop	 Stop / Hold
Rec	 Rec / Rec Mode
<<	 << / Tune-
>>	 >> / Tune+
I<<	 I<< / Preset-
>>I	 >>I / Preset+
Disc Menu	 D.Menu / Top
Menu	 Menu / Home
Up	 Up
Left	 Left
OK	 OK
Right	 Right
Back/Exit	 Exit / Cancel / Clear

Original	Replacement
Down	 Down
Last	 Back / Return
Vol+	 Vol+
Vol-	 Vol-
Blu-ray	 Display / Media
1	 1
2	 2
3	 3
4	 4
5	 5
6	 6
7	 7
8	 8
9	 9
0	 0
Red	 Red / Netflix / Search
Green	 Green / APP / Repeat







Original	Replacement
 AVR Power On	 Power
 AVR Power Off	 Shift + Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Menu	 Menu / Home
 Back/Exit	 Exit / Cancel / Clear
 Last	 Back / Return
 Up	 Up
 Down	 Down

Original	Replacement
 Right	 Right
 Left	 Left
 OK	 OK
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Vol+	 Vol+
 Vol-	 Vol-
 Mute	 Mute / Dimmer
 CH/Page Up	 CH+ / Page+
 CH/Page Down	 CH- / Page-
 Pause	 Pause / Step / Freeze
 I<<	 I<< / Preset-
 I>>	 I>> / Preset+
 Play	 Play / Slow
 Tune-	 << / Tune-



