



| Original | Replacement | Original | Replacement |
|--------------|------------------|--------------|-------------|
| On | Power | M-Room | D. Menu |
| Off | + Shift + Power | Vol+ | Vol + |
| Mute | Mute | Vol- | Vol - |
| AVR | + Shift + 1 | CH./[≡?] | TV/R |
| DVD | + Shift + 2 | SPKR/Menu | Menu |
| CD | + Shift + 3 | Up | Up |
| Tape | + Shift + 4 | Left | Left |
| VID1/VCR | + Shift + 5 | Set | Ok |
| VID2/TV | + Shift + 6 | Right | Right |
| VID3/CBL/SAT | + Shift + 7 | Down | Down |
| VID4 | + Shift + 8 | Digital/[≡X] | Subt |
| AM/FM | + Shift + 9 | Delay/Normal | Pre Ch |
| 6/8 CH | + Shift + Guide | 1 | 1 |
| Sleep | Sleep | 2 | 2 |
| Test | Text | 3 | 3 |
| Surr. | Dual | 4 | 4 |
| Night | List | 5 | 5 |



 


 
 

 


 
 


 

 





 



 



 



 



 

 
 
 
 


 
 



 

 


 
 
 





 
 


 


| Original | Replacement |
|------------|--------------|
| 6 | 6 |
| 7 | 7 |
| 8 | 8 |
| 9 | 9 |
| 0 | 0 |
| Tun-M/[≡+] | Smart |
| Mem/[≡◆] | Media |
| Tuning ▲ | Ch + |
| Tuning ▼ | Ch - |
| Direct | Guide |
| Clear | Exit |
| OSD | Info |
| RDS | Options |
| Preset ▲ | Shift + Ch + |
| Preset ▼ | Shift + Ch - |
| Dolby | Red |
| DTS Surr. | Green |

| Original | Replacement |
|---------------|-------------|
| DTS Neo 6 | Yellow |
| Logic 7 | Blue |
| Stereo | Shift + Red |
| I<</Skip Down | I<< |
| Skip Up/>>I | >>I |
| << DVD | << |
| Play DVD | Play |
| >> DVD | >> |
| Stop DVD | Stop |
| Pause DVD | Pause |

 





 
 


 








 










 
 
 
 





 

 












 


 
 
 


 





| Original | Replacement | Original | Replacement |
|--|---|--|--|
|  Power On |  Power |  3 |  3 |
|  Power Off |  Shift + Power |  4 |  4 |
|  Night |  Exit |  5 |  5 |
|  M-Room |  Text |  6 |  6 |
|  Vol+ |  Vol + |  7 |  7 |
|  Vol- |  Vol - |  8 |  8 |
|  SPKR/Menu |  Menu |  9 |  9 |
|  CH./[≡?] |  TV/R |  0 |  0 |
|  Digital/[≡X] |  Media |  Tun-M/[≡+] |  Guide |
|  Delay/Normal |  Info |  Mem/[≡◇] |  Pre Ch |
|  Up |  Up |  Direct |  Smart |
|  Down |  Down |  Clear |  Shift + Exit |
|  Right |  Right |  Preset ▲ |  Ch + |
|  Left |  Left |  Preset ▼ |  Ch - |
|  Set |  Ok |  RDS/D.Skip |  Options |
|  1 |  1 |  >> |  >> |
|  2 |  2 |  << |  << |





| Original | Replacement | Original | Replacement |
|--|---|---|--|
|  Power On |  Power |  Preset ▲/Blue |  Ch + |
|  Power Off |  Shift + Power |  RDS/D.Skip |  Options |
|  SPKR/Menu |  Menu |  >> |  >> |
|  Delay/Normal |  Info |  << |  << |
|  1 |  1 |  Play |  Play |
|  2 |  2 |  Stop |  Stop |
|  3 |  3 |  Pause |  Pause |
|  4 |  4 |  >> |  >> |
|  5 |  5 |  << |  << |
|  6 |  6 |  Power (On /Off) |  Media |
|  7 |  7 |  PR+ VCR |  Shift + Ch + |
|  8 |  8 |  PR- VCR |  Ch - |
|  9 |  9 |  Vol+ VCR |  Vol + |
|  0 |  0 |  Vol- VCR |  Vol - |
|  Tun-M/[≡+] |  Guide |  1 VCR |  Shift + 1 |
|  Mem/[≡♦] |  Pre Ch |  2 VCR |  Shift + 2 |
|  Direct |  Smart |  3 VCR |  Shift + 3 |



