

























 












Original	Replacement
 Power On	 Power
 Power Off	 Shift + Power
 Open / Close	 Eject / Surround
 Source	 AV / Input / RDS
 Display	 Display / Media
 Info	 Info / Angle
 Time	 Sleep / Timer
 10 -	 Guide / EPG / -/--
 10 +	 Fav / Marker / PC
 Folder +	 CH+ / Page+
 Folder -	 CH- / Page-
 I<< Previous	 I<< / Preset-
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 >>I Next	 >>I / Preset+
 << Search	 << / Tune-
 Stop	 Stop / Hold

Original	Replacement
 >> Search	 >> / Tune+
 Repeat	 Green / APP / Repeat
 Random	 Blue / Prime Video / Random
 A-B	 Yellow / YouTube / Repeat
 Program	 TV/Radio /
 Check	 Text / Goto
 Clear	 Exit / Cancel / Clear
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0

