



Original	Replacement
	 Power
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 Audio / Lang I/II
	 0
	 Text / Goto
	 Vol+
	 Mute / Dimmer
	 CH+ / Page+
	 Vol-

Original	Replacement
	 AV / Input / RDS
	 CH- / Page-
	 Menu / Home
	 Guide / EPG / -/--
	 Info / Angle
	 Up
	 Left
	 OK
	 Right
	 Back / Return
	 Down
	 Exit / Cancel / Clear
	 Shift + Red / Netflix /
	 Shift + Yellow / YouTube /
	 Shift + Blue / Prime
	 Shift + Green / APP /
	 Smart / List





Original	Replacement
 Fav2	 Display / Media
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 <<	 << / Tune-
 Stop	 Stop / Hold
 >>	 >> / Tune+
 Rec	 Rec / Rec Mode
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze

Original	Replacement

