 
 



 

 

 



 




 

 




 
 
 
 

 
 






Original	Replacement
	Mute
	Power
	PP
	I-II
	1
	2
	3
	4
	5
	6
	7
	8
	9
	0
	--
	P<P
	Menu

Original	Replacement
	Info
	Left
	Up
	P+
	Right
	Down
	P-
	Vol-
	Vol+
	Red/Sound
	Red/Sound
	Green/Picture
	Green/Picture
	Yellow/Feature
	Blue/Install
	TV
	AV



