



 







 



 



 



 



 



 

 

 

 

 

 

 


 
 

 

 

 

 

 




 




 

 

 

 


 



 


 
 
 

 

 

 

 

 

 

 





Original	Replacement	Original	Replacement
 Power	 Power	 Vol-	 Vol-
 Source	 AV / Input / RDS	 Vol+	 Vol+
 P.Mode	 Setup / OPT /	 Mute	 Mute / Dimmer
 S.Mode	 Sound / Title	 P+	 CH+ / Page+
 Home	 Shift + Menu /	 I/II/Audio	 Audio / Lang I/II
 1	 1	 P-	 CH- / Page-
 2	 2	 Subtitle	 Subtitle / EQ
 3	 3	 3D World	 Display / Media
 4	 4	 Info	 Info / Angle
 5	 5	 FAV	 Fav / Marker / PC
 6	 6	 Screen	 Picture / Format
 7	 7	 CH List	 Smart / List
 8	 8	 Menu	 Menu / Home
 9	 9	 Up	 Up
 Q.View	 D.Menu / Top	 Guide	 Guide / EPG / -/-
 0	 0	 Left	 Left
 Sleep	 Sleep / Timer	 OK	 OK





Original	Replacement	Original	Replacement
	Right		Right
	Back		Back / Return
	Down		Down
	Exit		Exit / Cancel / Clear
	Red		Red / Netflix / Search
	<<		<< / Tune-
	Green		Green / APP / Repeat
	>>		>> / Tune+
	Yellow		Yellow / YouTube / Repeat
	l<<		l<< / Preset-
	Blue		Blue / Prime Video / Random
	>>l		>>l / Preset+
	Text		Text / Goto
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	Rec		Rec / Rec Mode

