





 














Original	Replacement
	Mute / Dimmer
	Shift + Pause / Step /
	Audio / Lang I/II
	Power
	Smart / List
	Sleep / Timer
	Picture / Format
	Display / Media
	1
	2
	3
	4
	5
	6
	7
	8
	9

Original	Replacement
	AV / Input / RDS
	0
	Back / Return
	Setup / OPT /
	Sound / Title
	Up
	CH+ / Page+
	Vol-
	Left
	Menu / Home
	OK
	Right
	Vol+
	CH- / Page-
	Down
	Text / Goto
	Subtitle / EQ





Original	Replacement	Original	Replacement
[/ =]	PROGRAM TV/RADIO /		
<</[...]	TUNE- << / Tune-		
>>/[?]	TUNE+ >> / Tune+		
[X]	PC FAV MARKER Fav / Marker / PC		
Red/↑	NETFLIX SEARCH Red / Netflix / Search		
Green/←	APP REPEAT Green / APP / Repeat		
Yellow/→	YouTube REPEAT A-B Yellow / YouTube / Repeat		
Blue/Enter/H.Lock	Prime Video RANDOM Blue / Prime Video / Random		
White/↓/CH.List	GUIDE EPG Guide / EPG / -/--		
Pause/Timer	STEP-FREEZE Pause / Step / Freeze		
[♦]/Zoom	SIZE ZOOM Zoom / Size		
Exit	CLEAR EXIT EXIT / Cancel / Clear		

Original	Replacement

