



Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 Anyview Cast	 Shift + Up
 Anyview Cast Off	 Shift + Down
 TV	 TV/Radio /
 Source	 AV / Input / RDS
 I<<	 I<< / Preset-
 Stop	 Stop / Hold
 >>I	 >>I / Preset+
 <<	 << / Tune-
 Play	 Play / Slow
 >>	 >> / Tune+
 DMP	 Display / Media
 Pause	 Pause / Step / Freeze
 FAV	 Fav / Marker / PC
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat

Original	Replacement
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Menu	 Menu / Home
 HiSmart	 Smart / List
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Return	 Shift + Back / Return
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Vol+	 Vol+
 CH.List	 Shift + Smart / List
 CH+	 CH+ / Page+
 Vol-	 Vol-
 EPG	 Guide / EPG / -/-
 CH-	 CH- / Page-





	Original	Replacement		Original	Replacement
	1	1		Text	Text / Goto
	2	2		Index	D.Menu / Top
	3	3		Subpage	Setup / OPT /
	4	4			
	5	5			
	6	6			
	7	7			
	8	8			
	9	9			
	Info	Info / Angle			
	0	0			
	PRE-CH	Back / Return			
	Lang/I-II	Audio / Lang I/II			
	P.Mode	Picture / Format			
	S.Mode	Sound / Title			
	Size	Zoom / Size			
	Subt.	Subtitle / EQ			

