






 

 

 

 


 
 

 

 
 
 

 
 

 
 
















 



 

 
 
 
 




 

 
 
 

 






 
 
 



 
 
 
 


 





Original	Replacement	Original	Replacement
	Power		Power
	D/A		TV/R
	Source		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Last		Pre Ch
	Info		Info
	FAV		Shift + Pre Ch
	Picture		Shift + Format
	Sound		Shift + Dual
	Vol +		Vol +
	Vol -		Vol -
	Mute		Mute
	CH +		Ch +
	CH -		Ch -
	Menu		Menu
	EPG		Guide
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	I / II		Dual
	Still		List
	Zoom		Eject
	Exit		Exit





Original	Replacement
 Radio / Browse	 Shift + TV/R
 T.Shift / Rotate	 Shift + AV
 Audio / Page up	 Shift + Ch +
 Audio / Page up	 Shift + Subt
 Subtitle / Page down	 Subt
 Subtitle / Page down	 Shift + Ch -
 D/EMP	 Smart
 Media / PVR	 Media
 Play / Pause	 Play
 Play / Pause	 Pause
 Stop	 Stop
 Red / <<<	 Red
 Red / <<<	 <<<
 Green / >>>	 Green
 Green / >>>	 >>>
 Yellow / I<<<	 Yellow
 Yellow / I<<<	 I<<<

Original	Replacement
 Blue / >>>I	 Blue
 Blue / >>>I	 >>>I
 Text / Setup	 Text
 Size	 Format
 Reveal	 Options
 Cancel	 Back
 Hold / Sleep	 Sleep
 Index	 Shift + Info
 Sub.Code /	 3D
 Mix	 Shift + Options

