





 



 


 

 

















 


 












| Original | Replacement |
|--|--|
|  POWER |  Power |
|  INFO |  Info / Angle |
|  HDMI CONTROL |  Smart / List |
|  SLEEP |  Sleep / Timer |
|  SCREEN |  Picture / Format |
|  SOURCE |  AV / Input / RDS |
|  PRESETS |  Setup / OPT / |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  ZOOM/RED/▲ |  Zoom / Size |
|  ZOOM/RED/▲ |  Shift + CH+ / |
|  ZOOM/RED/▲ |  Red / Netflix / Search |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  REPEAT/GREEN/▼ |  Shift + CH- / Page- |

| Original | Replacement |
|--|---|
|  REPEAT/GREEN/▼ |  Green / APP / Repeat |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  ROOT/YELLOW |  Yellow / YouTube / Repeat |
|  RETURN |  Back / Return |
|  0 |  0 |
|  MENU |  Menu / Home |
|  TITLE/BUE |  Sound / Title |
|  TITLE/BUE |  Blue / Prime Video / Random |
|  UP |  Up |
|  LEFT |  Left |
|  OK/SELECT |  OK |
|  RIGHT |  Right |
|  DOWN |  Down |
|  P+ |  CH+ / Page+ |
|  P- |  CH- / Page- |





| Original | Replacement |
|---|---|
|  V- |  Vol- |
|  V+ |  Vol+ |
|  FAV |  Fav / Marker / PC |
|  LANG |  Audio / Lang I/II |
|  SUBTITLE |  Subtitle / EQ |
|  MUTE |  Mute / Dimmer |
|  SWAP/↔ |  Shift + Back / Return |
|  EPG |  Guide / EPG / -/-- |
|  [*] / [..] |  D.Menu / Top |
|  TEXT |  Text / Goto |
|  C |  Exit / Cancel / Clear |
|  DISPLAY |  Display / Media |
|  ANGLE |  Shift + Info / Angle |
|  SEARCH MODE |  Shift + Red / Netflix / |
|  REC |  Rec / Rec Mode |
|  STOP |  Stop / Hold |
|  PLAY |  Play / Slow |

| Original | Replacement |
|---|---|
|  PAUSE |  Pause / Step / Freeze |
|  << / Tune- |  << / Tune- |
|  >> / Tune+ |  >> / Tune+ |
|  I<< / Preset- |  I<< / Preset- |
|  >>I / Preset+ |  >>I / Preset+ |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

