





 





 
 

 





Original	Replacement
 Power	 Power
 Info	 Info / Angle
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Input	 AV / Input / RDS
 0	 0
 I/II Audio	 Audio / Lang I/II
 P.Mode	 Picture / Format
S.Mode	Sound / Title

Original	Replacement
 Menu	 Menu / Home
 Up	 Up
 Exit	 Exit / Cancel / Clear
 Left	 Left
 Enter	 OK
 Right	 Right
 Vol+	 Vol+
 Down	 Down
 CH+	 CH+ / Page+
 Vol-	 Vol-
 CH-	 CH- / Page-
 Zoom	 Zoom / Size
 EPG	 Guide / EPG / -/-
 List	 Smart / List
 Recall	 Back / Return
 Red	 Red / Netflix / Search
Green	Green / APP / Repeat





Original		Replacement		Original	Replacement
	Yellow		Yellow / YouTube / Repeat		
	Blue		Blue / Prime Video / Random		
	Text		Text / Goto		
	Still		Pause / Step / Freeze		
	Subtitle		Subtitle / EQ		
	Radio / E/W		TV/Radio /		
	Sleep		Sleep / Timer		
	Index		Display / Media		
	Fav-		<< / Preset-		
	Fav+		>>  / Preset+		

