








 











 






 

 





Original	Replacement
	 Power
	 Picture / Format
	 Back / Return
	 Menu / Home
	 Up
	 Left
	 OK
	 Right
	 Down
	 Exit / Cancel / Clear
	 Stop / Hold
	 Smart / List
	 I<< / Preset-
	 Play / Slow
	 Pause / Step / Freeze
	 >>I / Preset+
	 CH+ / Page+

Original	Replacement
	 Vol-
	 Vol+
	 CH- / Page-
	 Red / Netflix / Search
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random
	 Mute / Dimmer
	 Rec / Rec Mode
	 AV / Input / RDS
	 Setup / OPT /
	 Subtitle / EQ
	 Display / Media
	 Fav / Marker / PC
	 Guide / EPG / -/-
	 Shift + Smart / List
	 Info / Angle





Original	Replacement	Original	Replacement	
	1		1	
	2		2	
	3		3	
	4		4	
	5		5	
	6		6	
	7		7	
	8		8	
	9		9	
	Disc Menu		D.Menu / Top	
	0		0	
	Text / Media		Text / Goto	
	Sound		Sound / Title	
	Repeat		Zoom / Size	
				Shift + Green / APP /





Original	Replacement	Original	Replacement
	Power		Vol-
	TV/Radio /		Vol+
	Back / Return		CH- / Page-
	Menu / Home		Red / Netflix / Search
	Up		Green / APP / Repeat
	Left		Yellow / YouTube / Repeat
	OK		Blue / Prime Video / Random
	Right		Mute / Dimmer
	Down		Rec / Rec Mode
	Exit / Cancel / Clear		AV / Input / RDS
	Stop / Hold		Setup / OPT /
	Smart / List		Subtitle / EQ
	I<< / Preset-		Iptv
	Play / Slow		Fav / Marker / PC
	Pause / Step / Freeze		Guide / EPG / -/-
	>>I / Preset+		Shift + Smart / List
	CH+ / Page+		Info / Angle



