


 




 


 





 

 











 





 





Original	Replacement
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 Guide
 Return	 Back
 TV/AV	 AV
 Timer	 Shift + AV
 Picture	 Format
 Sound	 Dual

Original	Replacement
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 UP/CH+	 Up
 Down/CH-	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 Sys Menu	 Menu
 Display	 Shift + Info
 TV/TXT/Hold	 Media
 Cancel/Size	 3D
 Reveal	 Eject
 Nicam/A2	 Options
 Prog+	 Ch +
 Prog-	 Ch -
 Subpage	 List





	Original	Replacement	Original	Replacement
	Index	Smart		
	DVB Menu	D. Menu		
	Tv/Radio	TV/R		
	Exit	Exit		
	Info	Info		
	Subtitle	Subt		
	FAV	Pre Ch		
	Text	Text		
	EPG	+ Shift + Guide		
	Red	Red		
	Green	Green		
	Yellow	Yellow		
	Blue	Blue		

