





Original		Replacement		Original		Replacement	
	Power		Power		Menu		Menu / Home
	Mute		Mute / Dimmer		Vol-		Vol-
	1		1		Left		Left
	2		2		OK/List		OK
	3		3		Right		Right
	4		4		Vol+		Vol+
	5		5		Info		Info / Angle
	6		6		PR-		CH- / Page-
	7		7		Down		Down
	8		8		Exit		Exit / Cancel / Clear
	9		9		Red		Red / Netflix / Search
	Tv/Radio		TV/Radio /		Audio		Audio / Lang I/II
	0		0		↑		>> / Tune+
	←PR		Back / Return		Yellow		Yellow / YouTube / Repeat
	EPG		Guide / EPG / -/--		[...]		Subtitle / EQ
	Up		Up		↓		<< / Tune-
	PR+		CH+ / Page+		Blue		Blue / Prime Video / Random





Original	Replacement	Original	Replacement
	Audio L/R		Setup / OPT /
	TXT		Text / Goto
	Green		Green / APP / Repeat
	Pause		Pause / Step / Freeze
	[+]		Zoom / Size
	FAV		Fav / Marker / PC
	UHF		Smart / List
	PAL/NTSC		Picture / Format
	TV/AV		AV / Input / RDS

Original	Replacement

