





 



 



 

 
 


 
 

 

 
 
 
 
 
 

 



 
 




 
 

 

 
 
 

 
 

 



 
 
 
 








Original	Replacement	Original	Replacement
	Power		Power
	Sleep		Sleep
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Back		Back
	Null		Shift + Eject
	Vol+		Vol +
	Vol-		Vol -
	Aspect		3D
	Audio		Dual
	Display		Info
	CH+		Ch +
	CH-		Ch -
	Menu		Menu
	Exit		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK/Enter		Ok
	Input		AV
	PMode		Shift + Format
	Ch.List		List
	SMode		Shift + Dual
	FAV		Pre Ch





Original		Replacement		Original		Replacement	
	EPG		Guide		>>I		>>I
	TV/Radio		TV/R		I<<<		I<<<
	Subtitle		Subt		Red		Red
	Text		Text		Green		Green
	Index		Smart		Yellow/ (A)		Yellow
	Mix		Eject		Blue		Blue
	Hold		Media				
	Reveal		Options				
	Subpage		Shift + Subt				
	Cancel		D. Menu				
	Size		Format				
	Rec		Rec				
	Stop		Stop				
	Play		Play				
	T-Shift/Pause		Pause				
	<<<		<<<				
	>>>		>>>				

