











 



 














 






























 
















Original	Replacement	Original	Replacement
 Standby	 Power	 FAV	 Fav / Marker / PC
 Mute	 Mute / Dimmer	 Recall	 Back / Return
 Source	 AV / Input / RDS	 Menu	 Menu / Home
 P.Mode	 Picture / Format	 Exit	 Exit / Cancel / Clear
 S.Mode	 Sound / Title	 Auto	 Smart / List
 Audio I/II	 Audio / Lang I/II	 Display	 Display / Media
 Sleep	 Sleep / Timer	 Up	 Up
 1	 1	 Left	 Left
 2	 2	 OK	 OK
 3	 3	 Right	 Right
 4	 4	 Down	 Down
 5	 5	 Vol-	 Vol-
 6	 6	 Vol+	 Vol+
 7	 7	 CH-	 CH- / Page-
 8	 8	 CH+	 CH+ / Page+
 9	 9	 Red	 Red / Netflix / Search
 0	 0	 Green	 Green / APP / Repeat









Original	Replacement
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Text	 Text / Goto
 Hold	 Shift + Stop /
 Repeat	 Shift + Green / APP /
 Subtitle	 Subtitle / EQ
 Index	 Info / Angle
 Size	 Zoom / Size
 << / Reveal	 << / Tune-
 >> / Subpage	 >> / Tune+
 Play / Pause	 Play / Slow
 Play / Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 Rec	 Rec / Rec Mode
 Timeshift	 D.Menu / Top

Original	Replacement
 EPG	 Guide / EPG / -/--
 Tv/Radio	 TV/Radio /





Original	Replacement	Original	Replacement
 Standby	 Power	 Recall	 Back / Return
 Mute	 Mute / Dimmer	 Menu	 Menu / Home
 Source	 AV / Input / RDS	 Exit	 Exit / Cancel / Clear
 P.Mode	 Picture / Format	 Display	 Display / Media
 S.Mode	 Sound / Title	 Up	 Up
 Audio I/II	 Audio / Lang I/II	 Left	 Left
 Sleep	 Sleep / Timer	 OK	 OK
 1	 1	 Right	 Right
 2	 2	 Down	 Down
 3	 3	 Vol-	 Vol-
 4	 4	 Vol+	 Vol+
 5	 5	 CH-	 CH- / Page-
 6	 6	 CH+	 CH+ / Page+
 7	 7	 Red	 Red / Netflix / Search
 8	 8	 Green	 Green / APP / Repeat
 9	 9	 Yellow	 Yellow / YouTube / Repeat
 0	 0	 Blue	 Blue / Prime Video / Random





	Original	Replacement		Original	Replacement
	Text	Text / Goto			
	Subtitle	Subtitle / EQ			
	Index	Info / Angle			
	Size	Zoom / Size			
	<<	<< / Tune-			
	>>	>> / Tune+			
	Play/Pause	Play / Slow			
	Play/Pause	Pause / Step / Freeze			
	Stop	Stop / Hold			
	<<	<< / Preset-			
	>>	>>  / Preset+			
	Rec	Rec / Rec Mode			
	Timeshift	Smart / List			
	EPG	Guide / EPG / -/--			
	Tv/Radio	TV/Radio /			

	Original	Replacement		Original	Replacement

