







 









 



































 

















Original	Replacement	Original	Replacement
	 Power		 8
	 Yellow / YouTube / Repeat		 9
	 Exit / Cancel / Clear		 Zoom / Size
	 Eject / Surround		 0
	 Sleep / Timer		 Guide / EPG / -/-
	 Shift + Pause / Step /		 Blue / Prime Video / Random
	 TV/Radio /		 Display / Media
	 Mute / Dimmer		 Back / Return
	 1		 Green / APP / Repeat
	 2		 Menu / Home
	 3		 Vol+
	 Audio / Lang I/II		 Info / Angle
	 4		 Shift + Eject / Surround
	 5		 Shift + Play /
	 6		 Vol-
	 Subtitle / EQ		 Setup / OPT /
	 7		 Up





	Original	Replacement		Original	Replacement
		L/R		D.Menu / Top	
		Left		Left	
		Enter		OK	
		Right		Right	
		Stop		Stop / Hold	
		Down		Down	
		Play		Play / Slow	
		N/P		Picture / Format	
		PBC		Smart / List	
		Title		Sound / Title	
		Pause/Step		Pause / Step / Freeze	
		I<<		I<< / Preset-	
		>>I		>>I / Preset+	
		<<		<< / Tune-	
		>>		>> / Tune+	

