















 

 

 











 
















 







 



 

 









 



 













 
 


 










Original	Replacement	Original	Replacement
	[ ]→		EXIT / CANCEL / Clear
	Power		Power
	[1 2]		Shift + Red / Netflix /
	[← →]		Shift + Green / APP /
	[   >   <   ]		Shift + Yellow / YouTube /
	Red / Rec		Rec / Rec Mode
	Red / Rec		Red / Netflix / Search
	Green / <<		Green / APP / Repeat
	Green / <<		<< / Tune-
	Yellow / Stop		Stop / Hold
	Yellow / Stop		Yellow / YouTube / Repeat
	Blue / Play		Blue / Prime Video / Random
	Blue / Play		Play / Slow
	White / >>		>> / Tune+
	White / >>		Fav / Marker / PC
	[   ]		Shift + Guide / EPG / -/-
	Up		Up
	[≡]		Text / Goto
	Left		Left
	OK		OK
	Right		Right
	[> <]		Pause / Step / Freeze
	Down		Down
	[...]		Subtitle / EQ
	Vol+		Vol+
	Mute		Mute / Dimmer
	P+		CH+ / Page+
	Vol-		Vol-
	P-		CH- / Page-
	1		1
	2		2
	3		3
	4		4
	5		5






 










 



 

 



 


 
 





 





 



 















 









	Original	Replacement	Original	Replacement
	6	 6		
	7	 7		
	8	 8		
	9	 9		
	[i+]	 Info / Angle		
	0	 0		
	P<P / -/--	 Guide / EPG / -/--		
	[⊙]	 Sleep / Timer		
	[?]	 AV / Input / RDS		
	[↑↓] / Zoom	 Zoom / Size		
	Smart Sound	 Sound / Title		
	[ <> ]	 D.Menu / Top		
	Smart Picture	 Picture / Format		
	Instant Rec	 +  Shift + Rec / Rec Mode		
	I-II	 Audio / Lang I/II		
	DNR	 Back / Return		
	[ ]	 Setup / OPT /		

 













Original	Replacement	Original	Replacement
 DVD	 Shift + 2	 Vol+	 Vol+
 [1 2]	 Red / Netflix / Search	 Mute	 Mute / Dimmer
 [< >]	 Green / APP / Repeat	 P+	 CH+ / Page+
 [   >   <   ]	 Yellow / YouTube / Repeat	 Vol-	 Vol-
 <<	 << / Tune-	 P-	 CH- / Page-
 Stop	 Stop / Hold	 1	 1
 Play	 Play / Slow	 2	 2
 >>	 >> / Tune+	 3	 3
 [   ]	 Shift + Guide / EPG / -/-	 4	 4
 Up	 Up	 5	 5
 [≡]	 Text / Goto	 6	 6
 Left	 Left	 7	 7
 OK	 OK	 8	 8
 Right	 Right	 9	 9
 [> <]	 Pause / Step / Freeze	 [i+]	 Info / Angle
 Down	 Down	 0	 0
 [...]	 Subtitle / EQ	 P<P / -/-	 Guide / EPG / -/-
















 














 












 











 


 





Original	Replacement	Original	Replacement
 Smart Sound	 Sound / Title		
 [  <>]	 D.Menu / Top		
 Smart Picture	 Picture / Format		
 Instant Rec	 Rec / Rec Mode		
 [ ]	 Setup / OPT /		







 



 













 
 












Original		Replacement		Original		Replacement	
	[ ]→		Exit / Cancel / Clear		[≡]		Text / Goto
	Power		Power		Left		Left
	[1 2]		Shift + Red / Netflix /		OK		OK
	[← →]		Shift + Green / APP /		Right		Right
	[   >   <   ]		Shift + Yellow / YouTube /		[> <]		Pause / Step / Freeze
	Red / Rec		Red / Netflix / Search		Down		Down
	Red / Rec		Rec / Rec Mode		[...]		Subtitle / EQ
	Green / <<		Green / APP / Repeat		Vol+		Vol+
	Green / <<		<< / Tune-		Mute		Mute / Dimmer
	Yellow / Stop		Stop / Hold		P+		CH+ / Page+
	Yellow / Stop		Yellow / YouTube / Repeat		Vol-		Vol-
	Blue / Play		Blue / Prime Video / Random		P-		CH- / Page-
	Blue / Play		Play / Slow		1		1
	White / >>		Fav / Marker / PC		2		2
	White / >>		>> / Tune+		3		3
	[   ]		Shift + Guide / EPG / -/-		4		4
	Up		Up		5		5



 






 



 


 







 













	Original	Replacement	Original	Replacement
	6	 6		
	7	 7		
	8	 8		
	9	 9		
	[i+]	 Info / Angle		
	0	 0		
	P<P / -/--	 Guide / EPG / -/--		
	[⊙]	 Sleep / Timer		
	[?]	 AV / Input / RDS		
	[↑↓] / Zoom	 Zoom / Size		
	Smart Sound	 Sound / Title		
	[ <> ]	 D.Menu / Top		
	Smart Picture	 Picture / Format		
	Instant Rec	 Shift + Rec / Rec Mode		
	I-II	 Audio / Lang I/II		
	DNR	 Back / Return		
	[ ]	 Setup / OPT /		





Original	Replacement	Original	Replacement
	[ ]→ Exit / Cancel / Clear		Down
	Power		Subtitle / EQ
	[1 2] Red / Netflix / Search		Vol+
	[← →] Green / APP / Repeat		Mute / Dimmer
	[   > < ] Yellow / YouTube / Repeat		CH+ / Page+
	Rec Rec / Rec Mode		Vol-
	<< << / Tune-		CH- / Page-
	Stop Stop / Hold		1
	Play Play / Slow		2
	>> >> / Tune+		3
	[   ] Shift + Guide / EPG / -/-		4
	Up		5
	[≡] Text / Goto		6
	Left		7
	OK		8
	Right		9
	[> <] Pause / Step / Freeze		Info / Angle





Original	Replacement
	HDMI - BAT 0 0
	GUIDE EPG Guide / EPG / -/--
	TIMER SLEEP Sleep / Timer
	RDS AV INPUT AV / Input / RDS
	SIZE ZOOM Zoom / Size
	TITLE SOUND Sound / Title
	TOP MENU D.MENU D.Menu / Top
	FORMAT PICTURE Picture / Format
	SHIFT + REC MODE Shift + Rec / Rec Mode
	LANG I/II Audio / Lang I/II
	RETURN BACK Back / Return
	OPT-TOOLS SETUP Setup / OPT /

Original	Replacement

