



Original	Replacement	Original	Replacement
 Standby / On	 Power	 Menu	 Menu
 Open / Close	 Eject	 Up	 Up
 1	 1	 Right	 Right
 2	 2	 Down	 Down
 3	 3	 Left	 Left
 4	 4	 Enter	 Ok
 5	 5	 Choice	 Media
 6	 6	 Display	 Info
 7	 7	 I<< Previous	 I<<
 8	 8	 >>I Next	 >>I
 9	 9	 Stop / Clear	 Stop
 0	 0	 Play / Select	 Play
 10	 Pre Ch	 Pause / Strobe	 Pause
 +10	 Guide	 << / Slow -	 <<
 Return	 Back	 >> / Slow +	 >>
 Cancel	 Exit	 Play Mode	 Shift + Play
 Top Menu	 Shift + Menu	 Subtitle	 Subt





Original		Replacement		Original		Replacement	
	Audio		Dual				
	Theater Position		Options				
	3D Phonic		3D				
	Digest		Text				
	Angle		Format				
	Zoom	+	Shift + Eject				

