
 



 










Original		Replacement		Original		Replacement	
	Power Audio		Power		>10		Pre Ch
	Display/Chara		Info		10		Guide
	Tv/Video		TV/R		Karaoke Scoring		Shift + Smart
	Level Meter		Media		Reserve		Shift + Options
	Motion Sensor		Smart		Vocal Masking		Shift + Dual
	Title/Del		Options		Vocal Support		Shift + Subt
	Eco/Dimmer		Shift + 3D		Menu/PL		Menu
	1/Mark		1		Top Menu/PG		Shift + Menu
	2		2		On Screen		Shift + Info
	3		3		Fade Muting		Mute
	4		4		Up/PTY+		Up
	5		5		Down/PTY-		Down
	6		6		Right/TA/News/Inf		Right
	7		7		Left/PTY Search		Left
	8		8		Audio Vol+		Vol +
	9		9		Audio Vol-		Vol -
	0		0		Sleep		Sleep





Original	Replacement	Original	Replacement
A.Stby	Shift + 0	Audio/MPX	Dual
Clock/Timer	AV	Subtitle	Subt
Return	Back	Zoom	Eject
Cancel	Exit	Tuner/Audio In	Text
Set Up	D. Menu	File Type	Shift + TV/R
Stop	Stop	Repeat	Shift + Text
Play	Play	VFP/Scan Mode	Format
Pause	Pause	3D Phonic/HP Surr	3D
←/Tuner/Play	Shift + Back	C.Voice	Shift + List
I<<	I<<	DVD/Audio In	Shift + Format
>>I	>>I	Sound Mode	List
<<	<<	My Sound	Shift + Mute
>>	>>	V.Bass	Shift + 7
Play/Pause	Blue	Super Bass	Ch +
Play/Pause USB	Yellow	Super Bass Level-	Ch -
Play/Pause iPod A	Red	Mic Vol+	Shift + Right
Play/Pause iPod B	Green	Mic Vol-	Shift + Left





	Original	Replacement		Original	Replacement
	Karaoke Setting	SHIFT + 9	Shift + 9		
	Mic Mix	SHIFT + 8	Shift + 8		
	Power Tv	SHIFT + Power	Shift + Power		
	Repeat A-B	SHIFT + Play	Shift + Play		
	Angle	SHIFT + 2	Shift + 2		
	Tv Channel+	SHIFT + CH +	Shift + Ch +		
	Tv Channel-	SHIFT + CH -	Shift + Ch -		
	Tv Vol+	SHIFT + VOL +	Shift + Vol +		
	Tv Vol-	SHIFT + VOL -	Shift + Vol -		
	I<< Group/Title Skip	SHIFT + I<<	Shift + I<<		
	Group/Title Skip >>I	SHIFT + >>I	Shift + >>I		
	>> Group/Title	SHIFT + 6	Shift + 6		
	Enter/Set	OK	Ok		

