


 





 






 
 






 

 

 


 





Original	Replacement
 Power	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Red/Zoom	 Red
 Green/00	 Green
 Yellow	 Yellow
 Blue	 Blue
 Text	 Text

Original	Replacement
 Picture	 Format
 AV	 AV
 Menu	 Menu
 PR+	 Ch +
 Up	 Up
 PR-	 Ch -
 Down	 Down
 Right	 Right
 Vol+	 Vol +
 Vol-	 Vol -
 Left	 Left
 Up VCR	 Shift + Ch -
 UP [≡]	 Shift + Text
 Up DVD	 Shift + Up
 Down VCR	 Shift + Ch +
 Down DVD	 Shift + Down
 << VCR	 Shift + <<





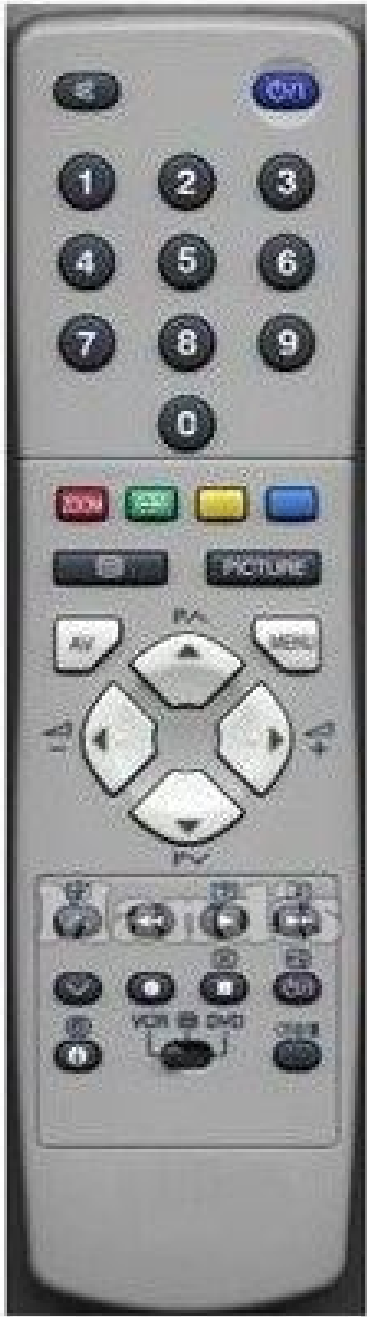Original	Replacement	Original	Replacement
<< DVD	<<		
Play/[?] VCR	+  Shift + Play		
Play/[?] [≡]	Eject		
Play/[?] DVD	Play		
>>/[+] VCR	+  Shift + >>		
>>/[+] [≡]	+  Shift + Right		
>>/[+] DVD	>>		
Rec VCR	+  Shift + Rec		
Stop/[X] VCR	+  Shift + Stop		
Stop/[X] [≡]	EXIT Exit		
Stop/[X] DVD	Stop		
Standby/[≡i] VCR	+  Shift + Power		
Standby/[≡i] [≡]	MEDIA Media		
Standby/[≡i] DVD	SMART Smart		
i/Timer	INFO Info		
O))/	DUAL Dual		

