












Original	Replacement	Original	Replacement
	Power		Power
	Review		Setup / OPT /
	Tv/VCR		TV/Radio /
	Audio		Audio / Lang I/II
	---		Smart / List
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	X		Exit / Cancel / Clear
	0		0
	Timer		Sleep / Timer
	Start Debut +		Green / APP / Repeat
	Stop Fin +		Blue / Prime Video / Random
	Date+		Vol+
	PR+		CH+ / Page+
	Start Debut -		Red / Netflix / Search
	Stop Fin -		Yellow / YouTube / Repeat
	Date-		Vol-
	PR-		CH- / Page-
	Prog		D.Menu / Top
	Timer/?		Shift + Sleep / Timer
	I/II		Display / Media
	30 Sec />>		Back / Return
	<<		<< / Tune-
	Play		Play / Slow
	>>		>> / Tune+
	Rec		Rec / Rec Mode
	Stop		Stop / Hold

 










Original	Replacement	Original	Replacement
	Pause / Step / Freeze		
	Menu / Home		
	OK		
	Up		
	Left / I<<-		
	I<< / Preset-		
	>>I / Preset+		
	Right / >>I+		
	Down		





Original	Replacement	Original	Replacement
 Power	 Power		
 TV/VCR	 AV / Input / RDS		
 Mute	 Mute / Dimmer		
 PR+	 CH+ / Page+		
 PR-	 CH- / Page-		
 Vol+	 Vol+		
 Vol-	 Vol-		

