



Original	Replacement	Original	Replacement
Color	Picture / Format	9	9
Dimmer	Mute / Dimmer	Display(9)	Shift + Display / Media
Standby/On	Power	Set	Menu / Home
Clock/Timer	Shift + Sleep / Timer	10/←	Guide / EPG / -/-
FM Mode	TV/Radio /	0	0
Sleep	Sleep / Timer	- Select	Left
1	1	→/+10	Fav / Marker / PC
2	2	Select+	Right
3	3	Cancel	Exit / Cancel / Clear
Display	Display / Media	Rev. Mode	Back / Return
4	4	Repeat	Green / APP / Repeat
5	5	Play Mode	Subtitle / EQ
6	6	CD Play/Pause	Play / Slow
7	7	FM/AM	Shift + 6
PTY	Red / Netflix / Search	Tape/<>	Shift + 5
8	8	AUX/MD	AV / Input / RDS
TA/News/Info	Info / Angle	I<<	I<< / Preset-



