

 










 
 





 























Original	Replacement
 CD1	 Shift + 1
 CD2	 Shift + 2
 CD3	 Shift + 3
 On/Off	 Power
 Active Bass Ex	 Blue / Prime Video / Random
 Sound	 Sound / Title
 Sleep	 Sleep / Timer
 Play Mode	 OK
 Repeat	 Green / APP / Repeat
 FM Mode	 TV/Radio /
 1	 1
 2	 2
 3	 3
 Character	 Setup / OPT /
 4	 4
 5	 5
 6	 6

Original	Replacement
 Cancel	 Exit / Cancel / Clear
 7	 7
 8	 8
 9	 9
 Set	 Info / Angle
 10	 Guide / EPG / -/-
 0	 0
 +10	 Fav / Marker / PC
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 Stop	 Stop / Hold
 Play/Pause CD	 Play / Slow
 Volume+	 Vol+
 Play/Pause MD	 Pause / Step / Freeze
 Fade Muting	 Mute / Dimmer
 Volume-	 Vol-
 MD REC Pause	 Rec / Rec Mode





Original	Replacement	Original	Replacement
 FM/AM	 +  Shift + 6		
 TAPE/AUX	 +  Shift + 5		

