







































Original	Replacement	Original	Replacement
Lang./Rewind	 << / Tune-	FAV Pref.	 Fav / Marker / PC
Browse	 Picture / Format	Red	 Red / Netflix / Search
TV	 TV/Radio /	Green	 Green / APP / Repeat
TV/SAT	 Smart / List	1. ?	 1
Epg	 +  Shift + Guide / EPG / -/-	Blue	 Blue / Prime Video / Random
Lang./Rewind	 +  Shift + Audio / Lang I/II	West	 I<< / Preset-
Yellow	 Yellow / YouTube / Repeat	Dev	 >>I / Preset+
2abc	 2	Freeze	 +  Shift + Pause / Step /
3def	 3	Dec/Pause	 Pause / Step / Freeze
4ghi	 4	East	 Rec / Rec Mode
5jkl	 5	H/V Play	 Play / Slow
6mno	 6	LNB F.Forward	 >> / Tune+
7pqrm	 7	Menu Up	 Up
8tuv	 8	Mute	 Mute / Dimmer
9wxyz	 9	Opt?	 Setup / OPT /
Guide Pilote	 Guide / EPG / -/-	App	 +  Shift + Green / APP /
0/10	 0	Info	 Info / Angle



Original	Replacement	Original	Replacement
Subt.List	 Subtitle / EQ	Audio	 Audio / Lang I/II
Sleep Timer	 Sleep / Timer	CH/Page-	 CH- / Page-
Video	 +  Shift + 4		
Text	 Text / Goto		
Zoom	 Zoom / Size		
Menu	 Menu / Home		
PWR On/Off	 Power		
Display	 Display / Media		
Menu Left	 Left		
OK Enter	 OK		
Menu Right	 Right		
Exit	 Exit / Cancel / Clear		
Menu Down	 Down		
Back	 Back / Return		
Volume+	 Vol+		
CH/Page+	 CH+ / Page+		
Volume-	 Vol-		

